

UFS 902/910

**Application of
external USB storage media
for recording and playback**

UFS 902/910

GENERAL NOTICE

KATHREIN cannot be held liable for damage, loss of data or consequential loss of any kind (e.g. loss of profit, interruption of production, loss of data and information, or other detriment to assets) resulting from the use or non-usability of this KATHREIN product, even where KATHREIN has pointed out the possibility of such loss occurring.

REQUIRED FIRMWARE UFS 902/910

The firmware used on the UFS 902 must be version "V1.02".


The firmware used on the UFS 910 must be version "V1.04".

If this firmware has not been installed on your UFS 902/910, you can either update the firmware via satellite as described in your UFS 902/910 manual, or download it from the following Internet website:

"<http://www.kathrein.de>". Firmware can be found under "Service" → "Software and Downloads" → "Receivers" → "UFS 902"/"UFS 910" → "Software and Firmware". For instructions on how to upload the software to your receiver, please see the Update Guide link on our Internet website ([ufs910_update_guide.pdf](#)).

EXTERNAL USB STORAGE MEDIA


To record programmes with the UFS 902/910, an external USB storage medium is required (e.g. external hard disk drive with USB connection). The device can be connected on one of the two USB 2.0 interfaces on the receiver **rear panel** (see image below). **The USB interface on the receiver front panel has not been designed for connection of USB storage media, it is only intended for firmware uploads.**

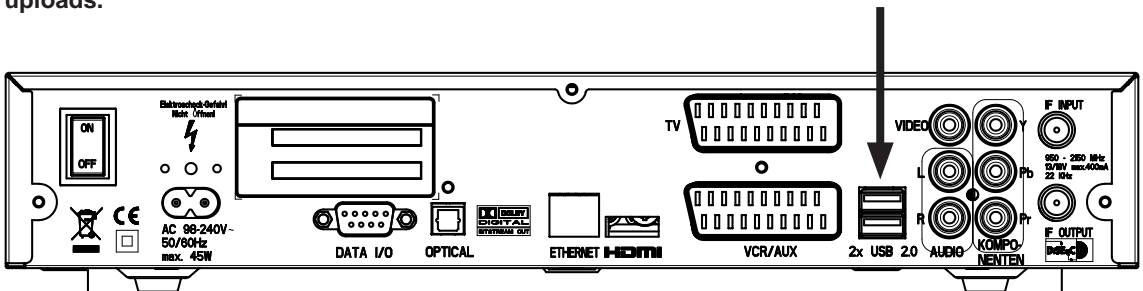


Please note that the USB 2.0 socket on the receiver only has an output current of 500 mA. For some hard disk drives, this current is insufficient for smooth operation. To guarantee optimal supply to the hard disk, you can either use a hard disk drive with a built-in power supply or you can insert a USB 2.0 hub with its own power supply unit.


After connecting the external storage medium to one of the two USB 2.0 interfaces, the symbol **USB** will appear on your receiver's display (only at UFS 910). Subsequently, the registration procedure will follow.







As soon as registration has been successfully concluded, the symbol **HDD** will also be displayed. The external storage medium can now be used to make recordings through the UFS 910.


Press the  button to check if the UFS 902 initialised successfully. If the screenshot "Recording Archive" appears, initialisation was successful.

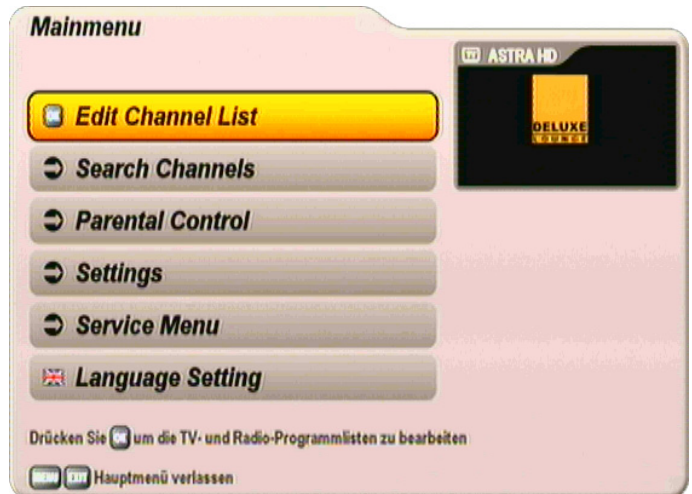
FORMATTING AND SCANNING AN EXTERNAL USB STORAGE MEDIUM

Connect the USB storage device to one of the two USB 2.0 interfaces on the receiver rear panel. Press the  button to access the receiver's main menu. The following display will appear:

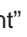

Select the "Service menu" with the   buttons and confirm by pressing . Next, use the   buttons to select "USB Device Management" and confirm with the  button. The following display will appear (Example):

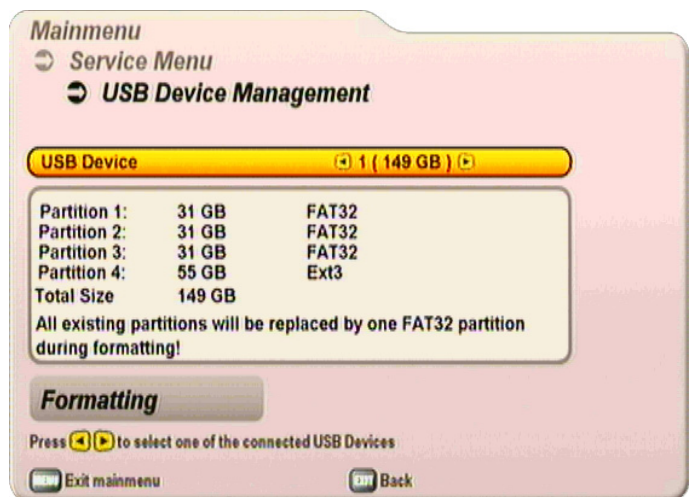

 Your external storage medium must be formatted to "FAT32". If your storage medium does not have this format, you must first format it in the receiver menu: "USB Device Management" (see Messages/Error Messages at the top of page 15).



FORMATTING AN EXTERNAL USB STORAGE MEDIUM






If a partitioned USB storage medium is formatted, all partitions are deleted and the entire hard disk is formatted with a "FAT32" partition.


If more than one external storage device is connected to the receiver, use the   buttons to select the storage device to be formatted.

FORMATTING AND SCANNING AN EXTERNAL USB STORAGE MEDIUM




Formatting leads to permanent deletion of all data saved on the storage medium!

Use the   buttons to choose the selection field “Formatting” and confirm the launch of the formatting procedure with the  button. The following display will appear:

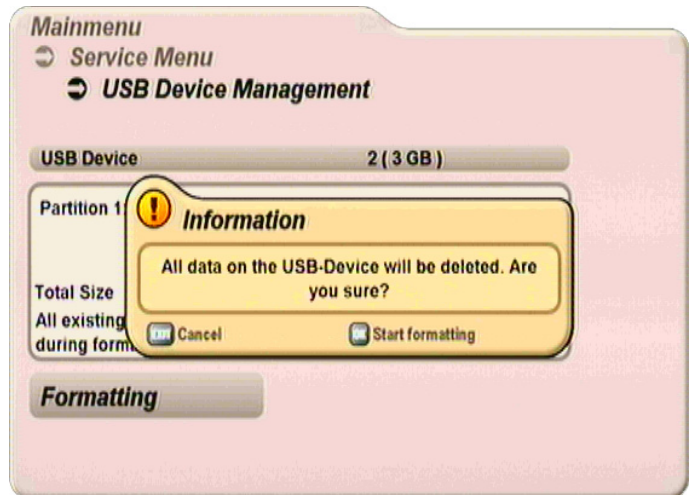

Confirm message with the  button. The following display will appear:

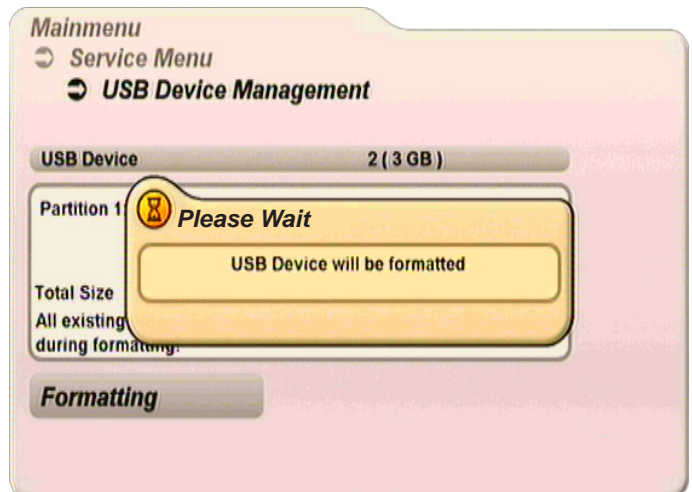


Once formatting has been completed, the receiver returns to the TV picture.

FORMATTING AND SCANNING AN EXTERNAL USB STORAGE MEDIUM

SCANNING EXTERNAL USB STORAGE MEDIA




During scanning, the connected USB storage medium is scanned for errors, which are automatically corrected by the receiver. Loss of recordings is likely!

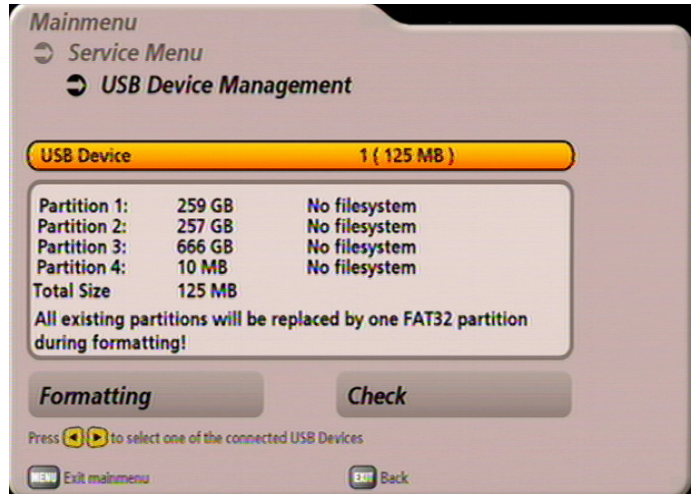


If more than one external storage medium is connected to the receiver, use the to select the storage medium that is to be scanned.

Use the buttons to choose the selection field “Scan” and confirm scanning by pressing the button. The following display appears:

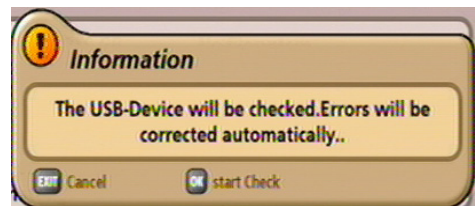


Confirm by pressing the button. The following display will appear:

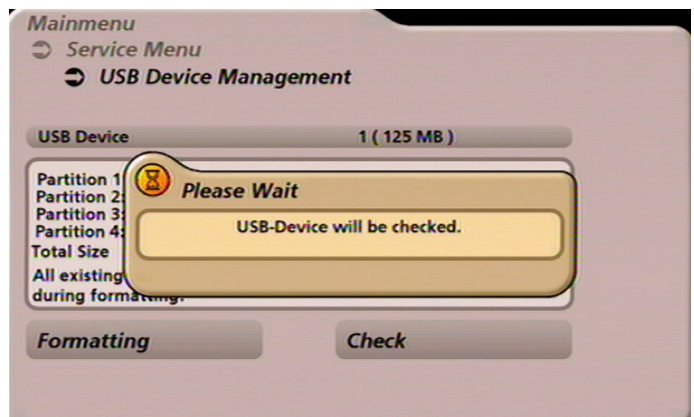

After scanning has been completed, the receiver automatically switches back to the menu “USB Device Management”.

RECORDING

OTR (ONE TOUCH RECORDING)

Press the  button. The following display will appear:



You are now able to change the settings (default) for recording:

Select the parameters to be changed with the   buttons. Use the   buttons to make changes.

Target: If more than one storage medium is connected to the receiver or if a storage medium with several partitions has been connected, you can select the storage medium or partition on which the recordings are to be stored.



The external USB storage device connected to the receiver at the time the recording was programmed must be connected to the receiver when recording starts. If the USB storage device is switched between recording programming and recording start, the receiver will not proceed with recording (see message text on page 14).

Start: Time of start (can also be entered with the keypad)

End: End time (can also be entered with the keypad)

Once all settings have been made, use the   buttons to access the last line "Recording ...".


Press the  button to begin recording.




Note: During the recording process, only the programme being recorded may be viewed!

RECORDING

PROGRAMMING A RECORDING VIA EPG (TIMER)

Press the  button. The following display appears:

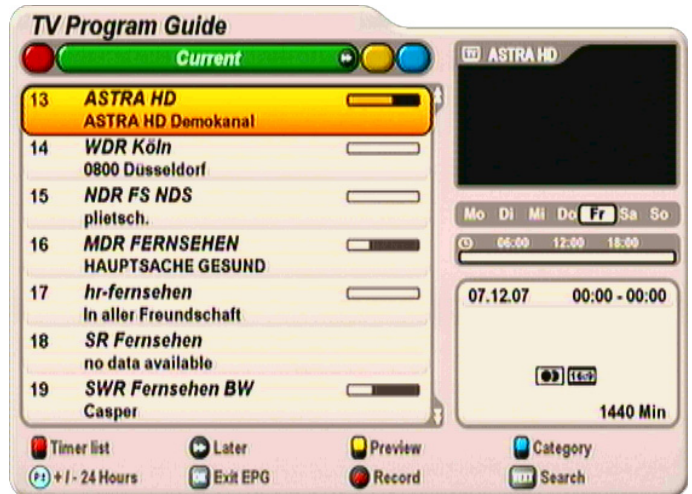

Select the desired channel from the available lists/views as described in the UFS 910 manual.


After selecting the desired channel, press the  (yellow) button. Use the   buttons to choose the programme to be recorded and then press the  button. The following display appears (Example):



Prior to each recording, make sure that there is enough free memory left on the external storage device or partition (see image on right)!

In this example, the external storage device still has enough memory capacity for approximately:

14 hours of standard programmes or
2 hours of HDTV programmes.

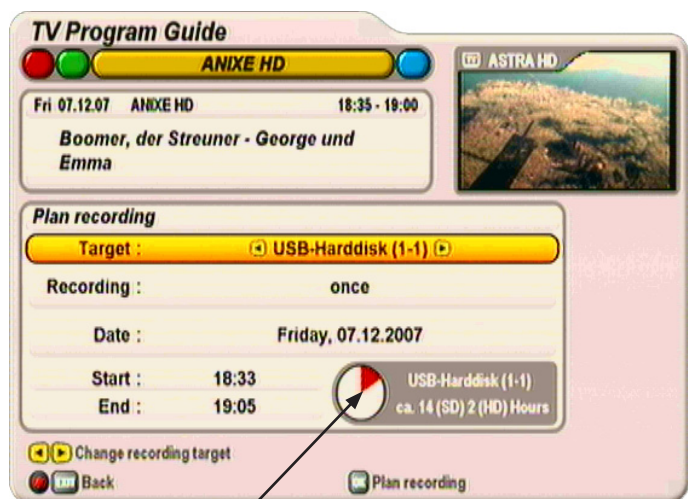

RECORDING

If required, use the cursor (◀▶) buttons to select the desired external storage device.

If more than one storage medium is connected to the receiver or if a storage medium with several partitions has been connected, you can select the storage medium or partition on which the recordings are to be made.

Subsequently, use the (▼▲) buttons to access “Recordings”.

Use the (◀▶) buttons to select the desired recording mode. The recording mode options available are:

- **Once-only:** The recording will be performed once
- **Daily:** The recording will be performed daily at a time you have specified
- **Weekly:** recording will be performed once a week on the same day and at the same time
- **User-defined:** The recording will be performed on days specified by you at times specified by you
- **Series recording:** The selected programme will be set up by the EPG for recording every time it is transmitted (may even be on different channels). This function does however require a daily update of the EPG data (the data are updated automatically when switching off into stand-by mode).

Use the cursor buttons (▼▲◀▶) to select the further items and use the keypad to complete the settings. When all settings have been made, press the (OK) button to save the recording settings.

EPG RECORDING SCHEDULE VIEW

You can view scheduled recordings in the recording schedule view of the EPG (FAV (red) button). The following display will appear (Example):








The (▶) button allows you to sort the recordings into “once-only” and “repeated” recordings.

The (●) button allows you to delete a recording that had been scheduled.

PLAYBACK

RECORDING ARCHIVE









To open the recording list, press the button  (select with the   buttons and then press  or the  button. the following display will appear:








The preview always displays the current broadcast of the programme which was last selected, along with the name of this programme. As soon as a recording is played back, the title of the recorded programme is displayed instead.

Underneath the preview window, the receiver displays the USB storage device + partition (if existent), on which the recording is saved.

In the view, recordings can be sorted according to the following criteria:

-  (green) button sorted by date (press the  button to sort according to date, title or duration (length of recording))
-  (yellow) button sorted by channel (use the   buttons to choose from available programmes). Only channels from which there are recordings will be displayed.
-  (blue) button sorted by category (use the   buttons to choose from available categories). Only categories from which there are recordings will be displayed.














Use the   buttons to select the desired recording. Press  to start playback. To exit the recording list, press the  once more. The selected recording can then be viewed in full-screen mode. Playback continues from the last play position.

If playback is started with the  button, the recording can be viewed in full-screen mode and from the very beginning.

PLAYBACK

REMOTE CONTROL BUTTONS AND THEIR FUNCTIONS

You have the following options during playback:

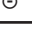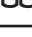	Pause	Interrupts playback. To resume playback, press again or press the Play button.	
	Info	1x	Displays progress bar showing the time played back so far as well as the remaining time of the recording (see picture on next page). Press the Exit button to hide.
		2x	Displays the recorded programme information. Press the Exit button to hide.
		3x	Displays the recorded programme's info-text. Press the Exit button to hide.
	Fast forward	Possible fast forward speeds: 2x, 4x, 8x, 16x, 24x and 32x. Each time the fast forward button is pressed, the speed increases to the next level. Press the rewind button to decrease fast forward speeds step by step. Press Play to return to normal playback speed.	
	Rewind	Possible rewind speeds: 2x, 4x, 8x, 16x, 24x and 32x. Each time the rewind button is pressed, the rewind speed increases to the next level. Press the fast forward button to decrease rewind speeds step by step. Press Play to return to normal playback speed.	
	Play	Press the Play button to exit rewind/fast forward mode or pause mode and resume normal playback.	
	Stop	Playback or fast forward/rewind is stopped and the receiver automatically jumps to the recording list.	
	Cursor (up)	Each time the cursor button (up) is pressed, the position in the recording from which playback resumes shifts 10% forwards.	
	Cursor (down)	Each time the cursor button (down) is pressed, the position in the recording from which playback resumes shifts 10% backwards.	
	Cursor (right)	Each time the cursor button (right) is pressed, the position in the recording from which playback resumes shifts 30 seconds forwards.	
	Cursor (left)	Each time the cursor button (left) is pressed, the position in the recording from which playback resumes shifts 30 seconds backwards.	
	Programme selection button	The programme selection button allows you to switch between individual saved recordings during playback of a recording.	
	Colour buttons	Same function as during normal TV operation (see UFS 910 manual)	
	OK	Calls up the recording list during playback. Playback continues in the preview window.	

PLAYBACK



Displays current playback mode
(in example, "Play")

Time played back so far

Remaining time

EDITING RECORDINGS IN THE RECORDING LIST

Use the buttons to select the recording you would like to edit. Next, press the button to call up the "Editing" menu.

The following display will appear:



Use the buttons to select the desired task.

Delete:


Once you have confirmed your selection with the button, the recording you selected is irrevocably deleted!

Lock/Unlock:




To lock/unlock the recording you have previously selected, you must first enter the 4-digit PIN code (default: 0000) after confirming with the button.

PLAYBACK

Rename:

Press the  button to rename the recording you have previously selected. A keypad will appear with which you can enter names alphanumerically. For instructions on how to enter names, please see the section "Alphanumeric Input" in your UFS 902/910 manual.




Change category:

In order to assign a recording previously selected to another category (Miscellaneous, Movies, Series, News, Entertainment, Sport, Children's programmes, Music, Art/Culture, Reports, Science/Education, Leisure), choose the desired category with the   buttons and confirm with .




Notice on the tasks "Copy to" and "Move to":

Before executing any one of these tasks, always make sure that there is enough free memory on the desired target location.

Copy to:

To copy a recording you have previously selected to another partition or to another connected USB storage device, use the   buttons to select the target partition or desired USB storage device and confirm with the  button. The recording is copied and the original remains where it was.

Move to:

To move a recording you have previously selected to another partition or to another connected USB storage device, use the   buttons to select the target partition or desired USB storage device and confirm with the  button. The recording is moved to the new target and deleted from its original storage place!

TIMESHIFT (TIME-SHIFTED VIEWING)

If you cannot catch the beginning of a programme because you are occupied with something else, or if you have to take a break from watching while a programme is being broadcast, you can watch it in timeshift mode. Press the **⏸** button to activate this mode. The following display will appear:

You can change the following settings for timeshifted recording:

Use the **⏮****⏭** buttons to select the settings to be changed. Effect changes using

the **⏪****⏩** buttons and number keys.



- Target: If more than one storage medium is connected to the receiver or if a storage medium with several partitions has been connected, you can select the storage medium or partition on which the recordings are to be stored.
- Start: Time of start (can also be entered with the keypad)
- End: End time can also be entered with the keypad in case the standard recording time (two hours) is not long enough or too long.


Once all settings have been made, use the **⏮****⏭** buttons to access the line "Start Timeshift (xxx min)".

Press **OK** to start recording.

The receiver continues recording the programme in the background while you see a freeze-frame.

You can also modify the recording time while recording is being effected, as described in "Save/extend timeshift". The receiver will display "II" and "REC".

Press the **⏮** button to start timeshifted viewing. The following display will appear (Example):

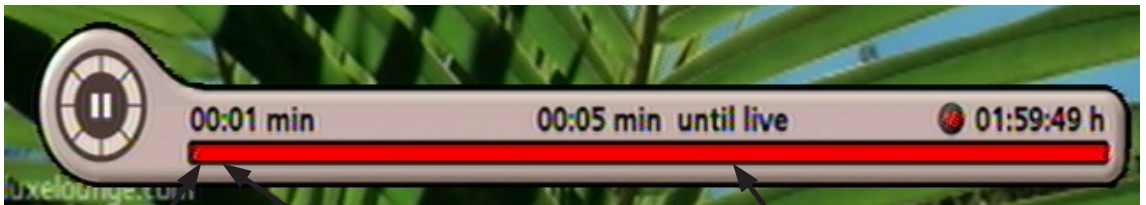

Time-shifted segment already viewed (see time display → 02:33 min)

Difference between the time-shifted segment and the live broadcast (see time display → 03:09 min)

Remaining timeshift buffer (see time display → 01:54:18 h)

TIMESHIFT (TIME-SHIFTED VIEWING)


You can activate the recorder functions “Fast forward” (to the point the broadcast has reached at the time), “Rewind” (to the point at which you started recording the programme), “Pause” and “Playback” with the corresponding buttons. If you press the ⏸ button, the TV picture freezes but recording continues in the background. To resume viewing, press the ⏸ button once more or press the ▶ button.



Once you have viewed the programme in full, you will not be able to retrieve it from the hard disk! To save the broadcast to the hard disk, you must proceed as described under “Save/extend timeshift recording”.


You can cancel time-shifted playback at any time by pressing the ⏏ button or by switching the programme. The following display will appear (Example):

To stop time-shifted recording, press the OK button or button or cancel with the ⏏ button or EXIT button.

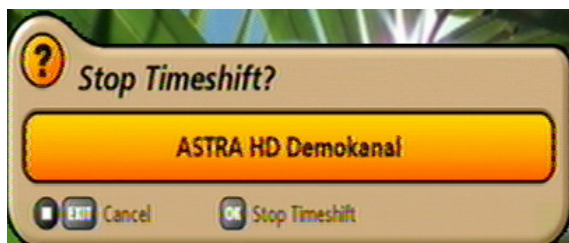

SAVE/EXTEND TIMESHIFT RECORDING

To save a timeshift recording and not lose it after you have finished viewing it, or to extend the recording time, press the ⏻ button. The following message will appear:

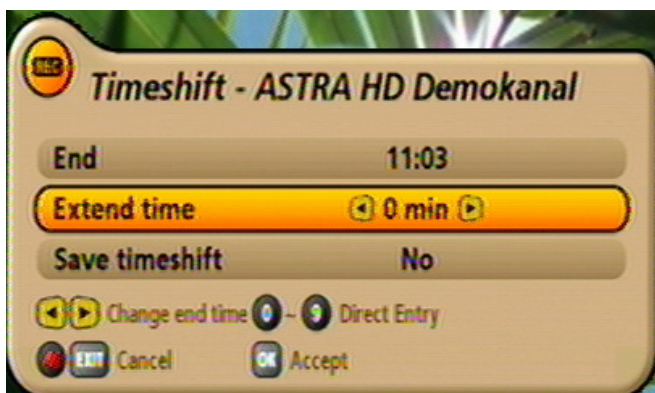

Use the ⏴⏵ buttons to select the entry to be modified. Change the settings using the ⏪⏩ buttons. Confirm new settings by pressing the OK button.

MESSAGES/ERROR MESSAGES



This message is displayed whenever a hard disk which is not FAT32 formatted is connected to a USB interface. The hard disk can then be formatted in the menu "Service menu/USB Device Management" (see pages 3-4). If the connected hard disk contains FAT32 partitions, this message is not displayed.




USB device could not be registered. Please try again..



General error (inaccessible play position, invalid path...)



There is either no USB device installed or the wrong device has been installed e.g. the USB device connected to the receiver at the start of recording is not the one which was connected during programming of the recording.

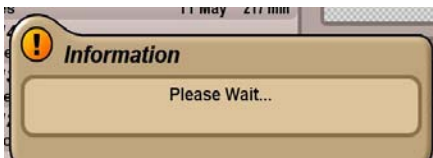

The receiver is executing a task in the background. After the task has been completed, the message will disappear and the receiver can be operated as usual.




If formatting of the USB storage device is confirmed with the OK button, all data saved on the device will be permanently deleted.




If the storage device does not have enough free memory when the recording procedure is started (through OTR - One Touch Recording or EPG timer recording), this message is displayed. Check your recording list and delete recordings if necessary.

MESSAGES/ERROR MESSAGES

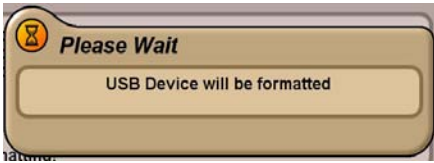

USB device is being formatted.

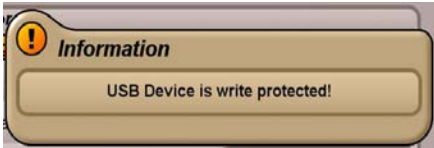

The USB storage device is write-protected. Check and/or deactivate the device. Recording or deletion is not possible.



The connected USB storage device is full. No recordings can be made on the device. Please check the recording list and delete recordings if necessary.